


OPR-8B

Elite Solid State

OPTICAL FIBER PULSE RECEIVER INSTRUCTION SHEET

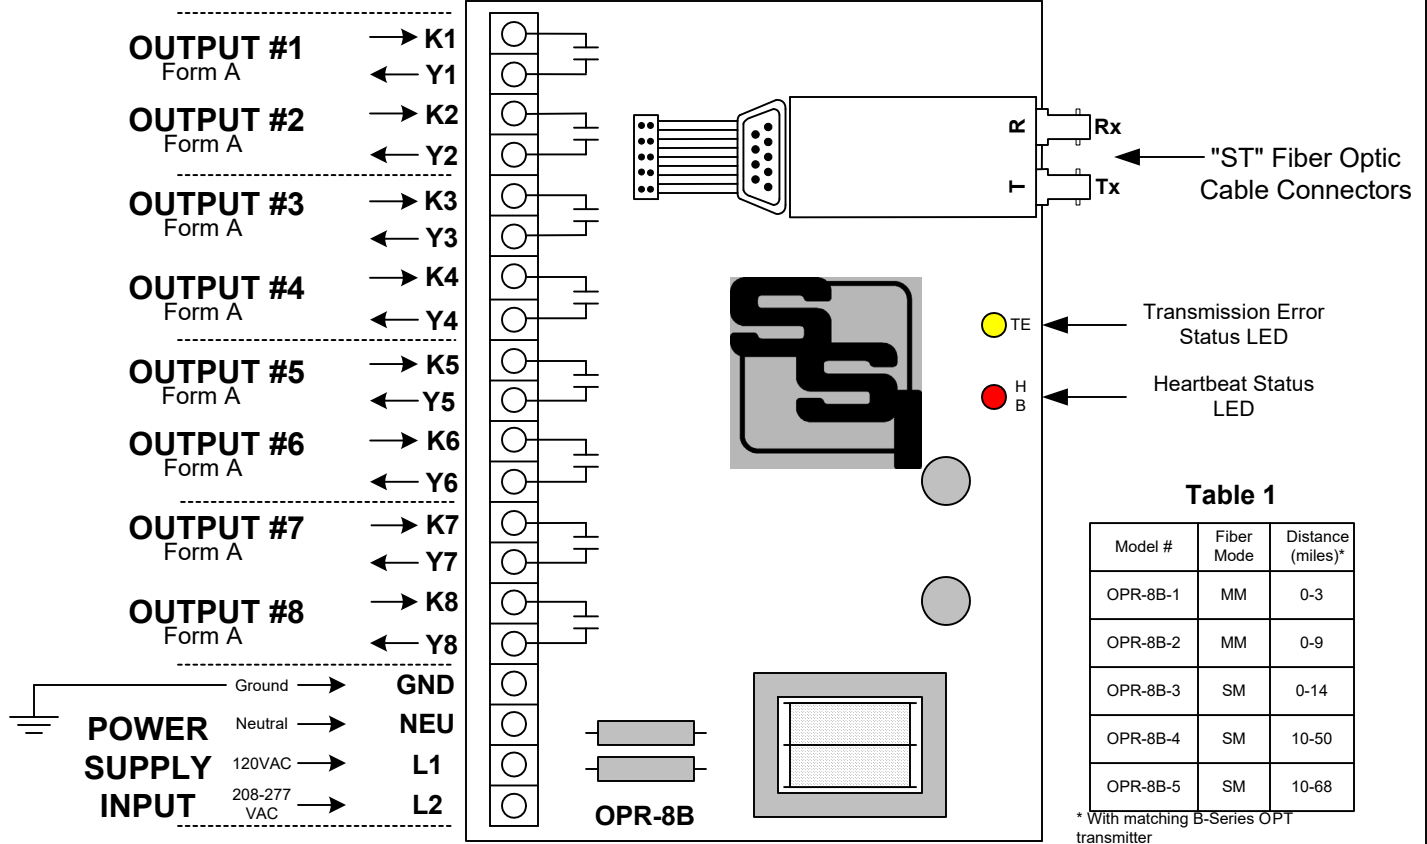


MOUNTING POSITION - The OPR-8B may be mounted in any position.

POWER INPUT - The OPR-8B can be powered by 120VAC or 208 to 277VAC. Connect the **GND** terminal to the electrical system ground. Connect the Neutral lead to the **NEU** terminal. Connect the **L1** terminal to the 120VAC "Hot" lead for 120VAC operation. Connect the **L2** terminal to the 208, 240, or 277 "Hot" lead. **Do not use both L1 and L2. ** Exercise caution when board is energized. There is voltage present at L1 and L2 when powered. ****

RELAY OUTPUTS - The OPR-8B has eight KY pulse outputs, that are configured as 2-Wire (Form A). Outputs are K1 & Y1 for output #1; K2 & Y2 for output #2; etc. Relay outputs are electrical isolated, solid-state dry-contact type with NO sourced voltage. The receiving equipment must supply their its own wetting voltage or an external power supply like the MPS-2 will be necessary.

GROUND - The GND terminal on the OPR-8B is a common ground with the chassis and is connected to the Chassis by means of the lower left-hand mounting screw. Therefore, if necessary, the electrical system ground can be connected to the OPR's chassis. Do not tie the Ground and Neutral terminals together unless Neutral does not exist at mounting location, i.e.: at meter.

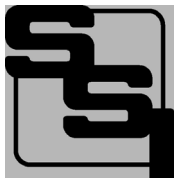

SOLID STATE INSTRUMENTS

by Radian Research, Inc

3852 Fortune Dr, Lafayette, IN 47905

Phone: (765) 449-5576

Mail: technicalsupport@radianresearch.com

INSTRUCTION SHEET

OPR-8B OPTICAL FIBER PULSE RECEIVER (con't)

Fiber Optic Cable Connections - Locate the two "ST" fiber optic ports in the upper right-hand corner of the OPR-8B receiver module. Connect the fiber optic cable to these ports using the "ST" twist lock connections. The cables should be "crossed" such that each cable is connected from the "Tx" fiber optic port on one end and the "Rx" fiber optic port on the opposite end. See the System Block Diagram below.


The OPR-8B will receive pulse information from the OPT-8B Optical Fiber Pulse Transmitter up to the distances in Table 1. Care should be taken to follow all proper fiber optical cable implementation standards. Maximum distance will vary with fiber type and quality.

Troubleshooting - LED Status Lights - The OPR-8B has two status lights to help the installer determine system status.

Red "Heartbeat" LED (HB) - This LED blinks on and off once per second indicating the system is operating and the microcontroller is running through its normal program loop. There is no other meaning to this except that the system is alive and running, and appears to be operating normally.

Yellow "Transmission Error" LED (TE) - This LED will light if the microcontroller receives one or more communication packets from the OPT-8B Transmitter that contain errors or that has incorrect information.

OPR-8B SYSTEM BLOCK DIAGRAM

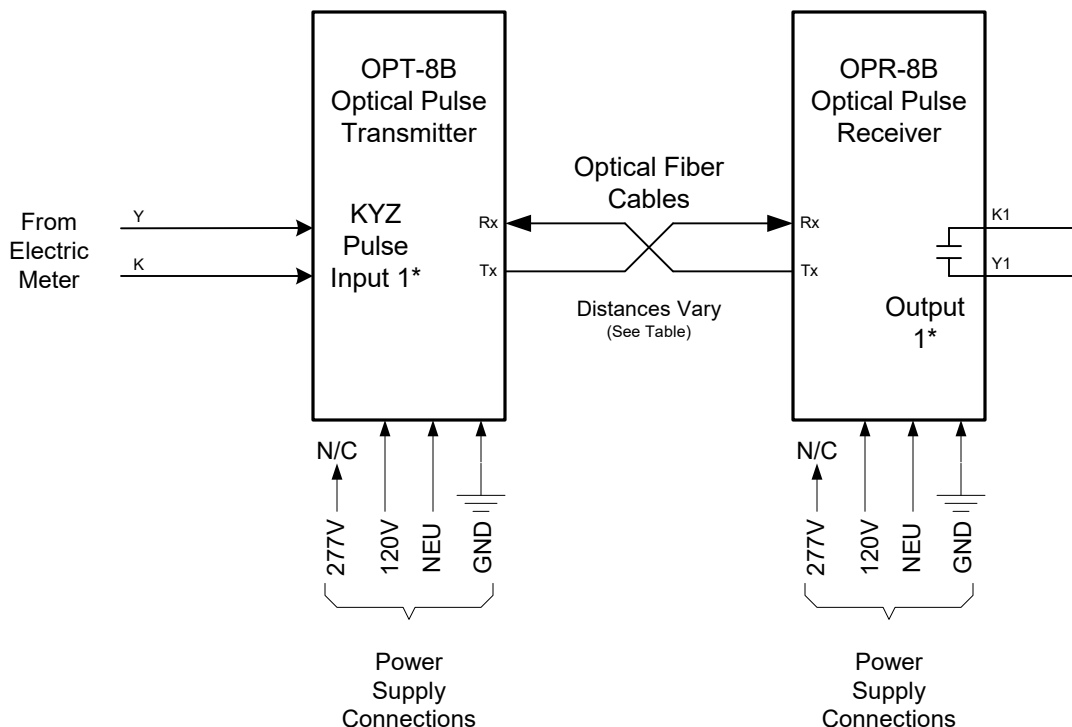

* Only 1 input/Output Circuit Shown



SOLID STATE INSTRUMENTS

by Radian Research, Inc

3852 Fortune Dr, Lafayette, IN 47905

Phone: (765) 449-5576

Mail: technicalsupport@radianresearch.com