


CIR-3PS+

Elite Solid State

CUSTOMER INTERFACE RELAY INSTRUCTION SHEET

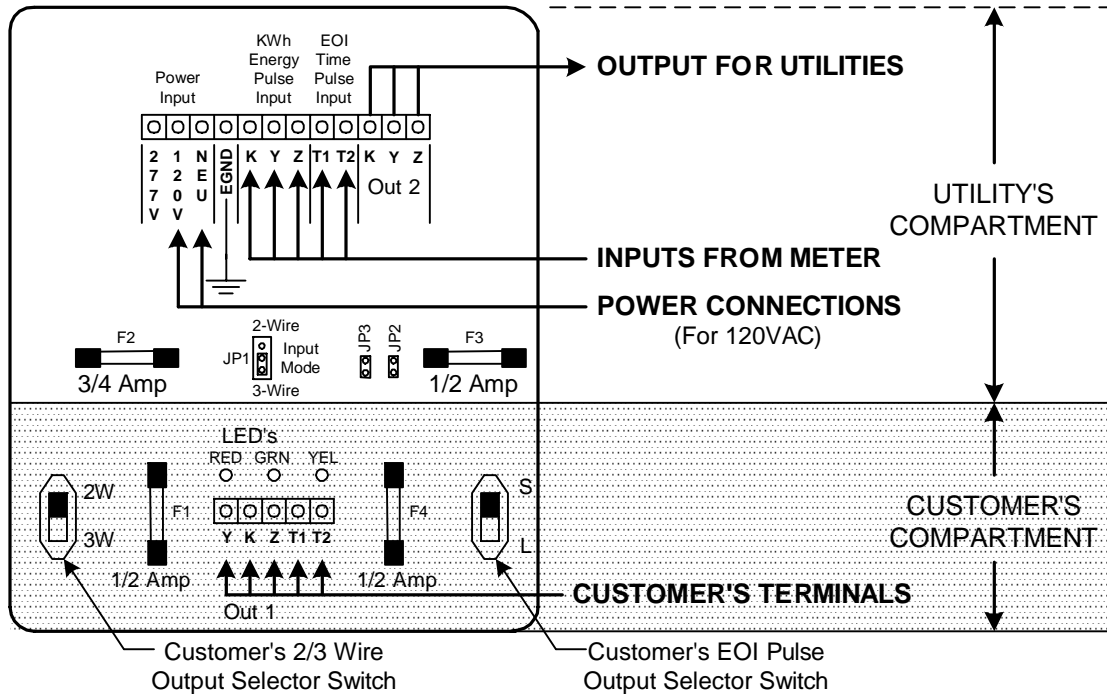

MOUNTING POSITION - The CIR-3PS+ may be mounted in any position.

POWER INPUT - For 120VAC, use the **120V** terminal for the "hot" lead and the **NEU** terminal for the neutral power supply lead. For 208 to 277VAC, use the **277V** terminal for the "hot" lead and the **NEU** terminal for the neutral power supply lead. The **EGND** terminal **MUST** be connected to the power supply ground.

METER CONNECTIONS - Connect the K, Y, & Z leads from the meter to the **KYZ Input #1** terminals in the utility's compartment. K to K; Y to Y; and Z to Z. The CIR-3PS+ provides the +13VDC wetting (sense) voltage to the meter's KYZ terminals. The CIR-3PS+'s KYZ input may be either 2 or 3-Wire input. Place the jumper shunt on the correct pair of pins on JP1 for the input mode. The CIR-3PS+ also has a separate 2-wire (Form A) input for End-of-Interval pulses or any general Form A use. Connect the 2-Wire EOI leads from the meter to **T1** and **T2** on the terminal strip in the utility compartment. T1 supplies +13VDC wetting (sense) voltage to the meter.

CUSTOMER OUTPUT - The customer's outputs are located at the bottom of the CIR-3PS+ board in the customer compartment. If the customer's output selector switch is in the 2W (2-wire) position, each change of input pulse state (K to Y or K to Z) will cause a single output pulse of 1/10 of a second (100 mS) to occur between the output terminals K & Y. If the switch is in the 3W (3-Wire) position, each K to Y closure will cause a K to Y output. A K to Z closure will result in a K to Z output. The CIR-3PS+ contains an input debouncing circuit which eliminates false pulses. If more than one K to Y input (pulse) occurs when the relay changes state, only the first pulse will be acted upon. This is also true for the K to Z input. Arc suppression for the contacts of the solid-state relay are provided internally. Set the EOI output pulse switch to either "S" for short (fixed length) pulses or "L" for long (actual length) pulses. If set to Short pulses, select the output time on JP2 and JP3 as indicated by the table on the board or on the next page.

UTILITY OUTPUT - The utility's KYZ output is located in the utility compartment and is a fixed 3-wire (Form C) output. Arc suppression for the contacts of the solid-state relay are provided internally.

FUSES - Fuses are 3AG fast-blow type. Fuse F2 in the utility's compartment is coordinated with the customer's fuse F1. Fuse F2 must be larger than Fuse F1. F2 is 3/4 Amp maximum, and F1 is 1/2 Amp maximum. Fuse F3 (1/2 Amp) protects the utility's output only. Fuse F4 (1/2 Amp) protects the customer's time (EOI) output only.



SOLID STATE INSTRUMENTS


a division of Brayden Automation Corp.

6230 Aviation Circle, Loveland Colorado 80538

Phone: (970)461-9600 Fax: (970)461-9605

E-mail: support@solidstateinstruments.com

CIR-3PS+ Wiring Diagram

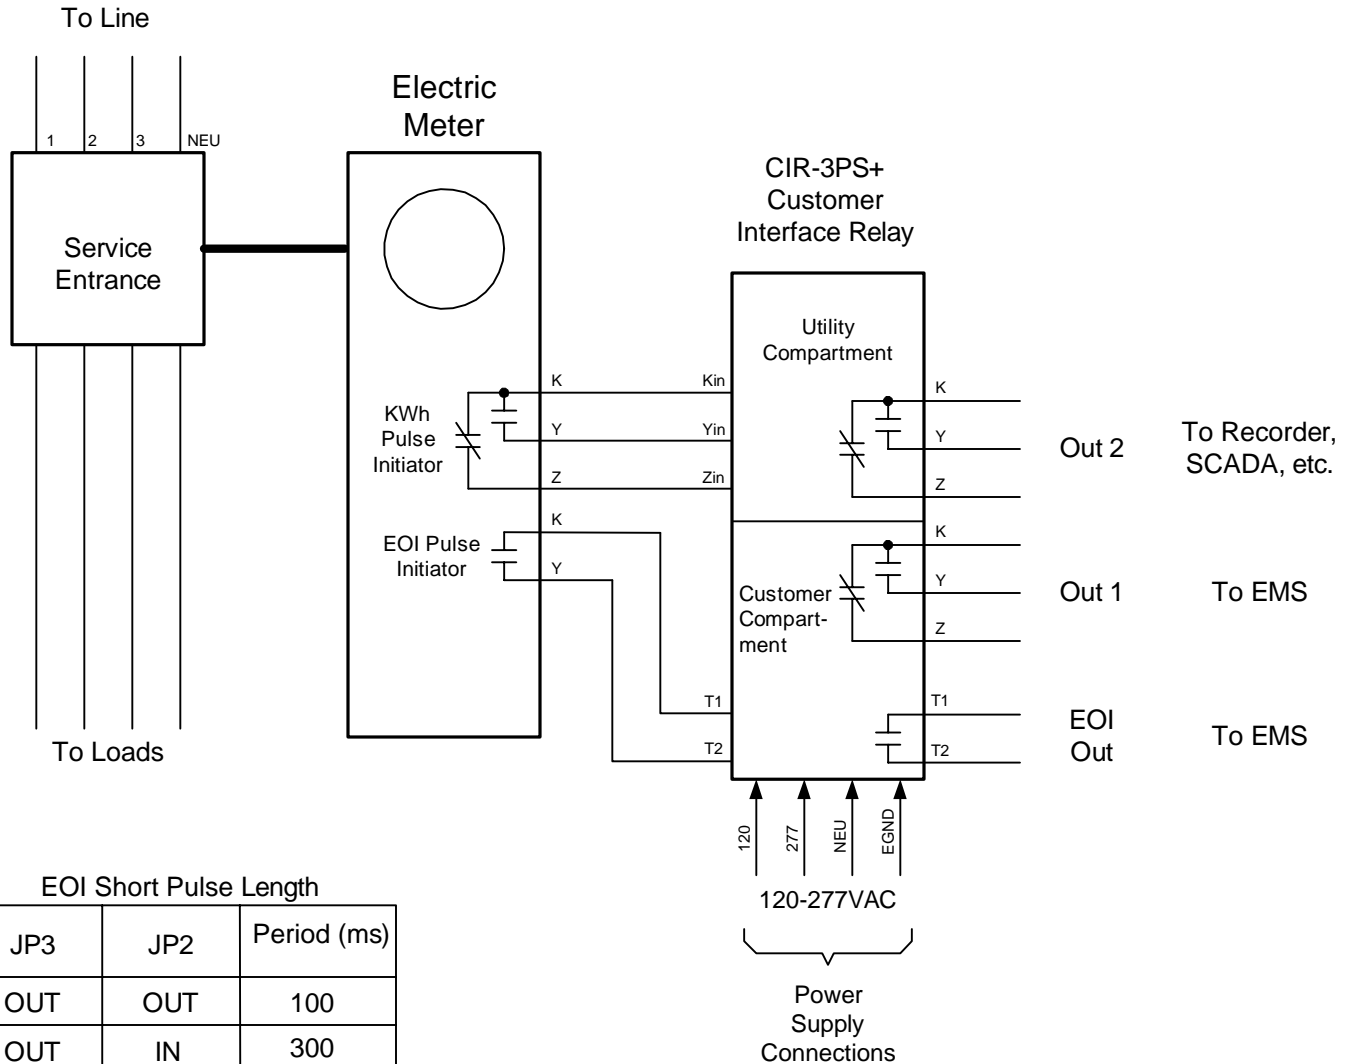

EOI Short Pulse Length

JP3	JP2	Period (ms)
OUT	OUT	100
OUT	IN	300
IN	OUT	500
IN	IN	1000

CIR-3PS+ Customer Interface Relay Wiring Diagram		REVISIONS	
		NO.	DATE
DATE ORIGINAL 12/10/11		SCALE N/A	
LATEST REVISION		DRAWN WHB	

Brayden Automation Corp./
Solid State Instruments div.
 6230 Aviation Circle
 Loveland, CO 80538
 (970)461-9600
 (970)461-9205 fax
www.solidstateinstruments.com